


BIG BLOCK CHEVY LOW MOUNT ALTERNATOR BRACKET

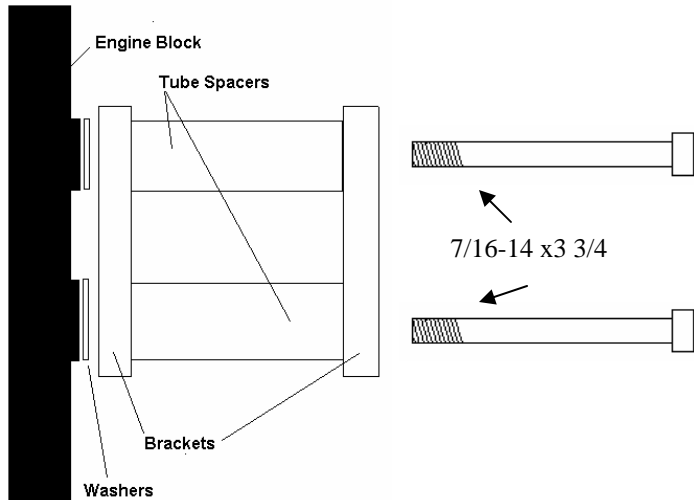

1. Mount the brackets and tube spacers to the block (loosely) using 7/16 –14 x 3 3/4 bolts
2. Use the last 3/8 –16x 3 3/4 to mount the alt. (bolt, bracket, alt, thick spacer, bracket, nut) Slightly tighten bolts.
3. In the top hole of the alt., mount the extension, point toward the water pump
4. Mount one rod end to the extension, and the other to one of the water pump holes.
5. You will need to use a spacer for the water pump mount.
6. Mount pulley, and belt, tension belt, and tighten all bolts.



714) 289-9060

PART NUMBER

7716

To lower Driver side water pump bolt

