


THE “DOGBONE”

Power steering pump relocation arm



Part Number
7720

- DogBone
- 2 – 3/8 -16 x 3/4
- 2 – an washers

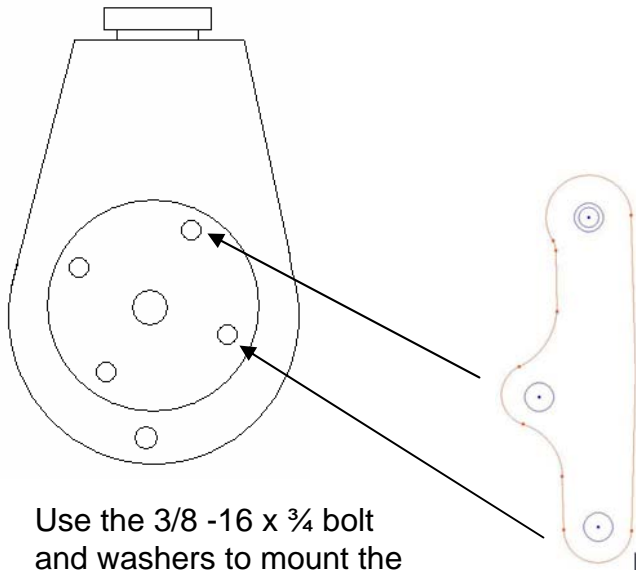

Use the 3/8 -16 x 3/4 bolt and washers to mount the “Dogbone” to the pump as shown.

