



CNC CUSTOMS AND MANUFACTURING, INC.
714) 289-9894

**SMALL BLOCK CHEVY "BRIDGE" ALTERNATOR /
AC BRACKET**

PART # 7750





Remove these bolts

Remove the two top water pump bolts, and the two front intake manifold bolts.

Show by the arrows



Install main "Bridge" bracket (shown on left) using (2) 3/8 16 x 3 1/4 SHCS and 3/4 inch spacers in the top two water pump holes. (Shown on the right) do not tighten these all the way yet.

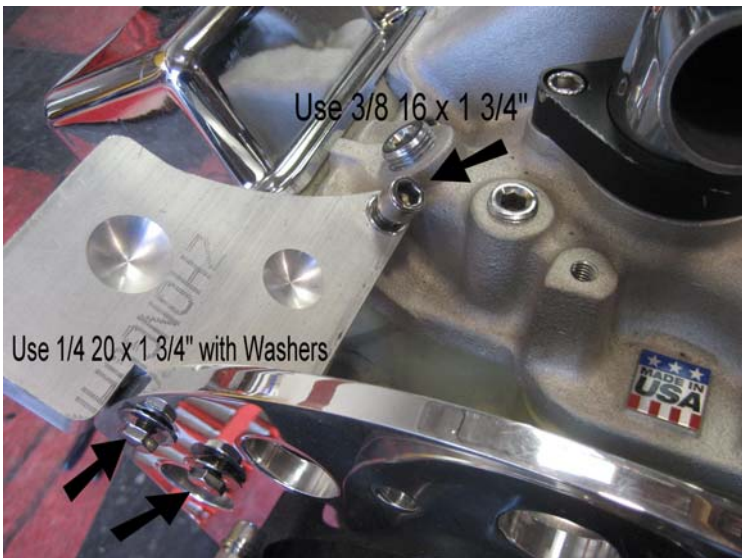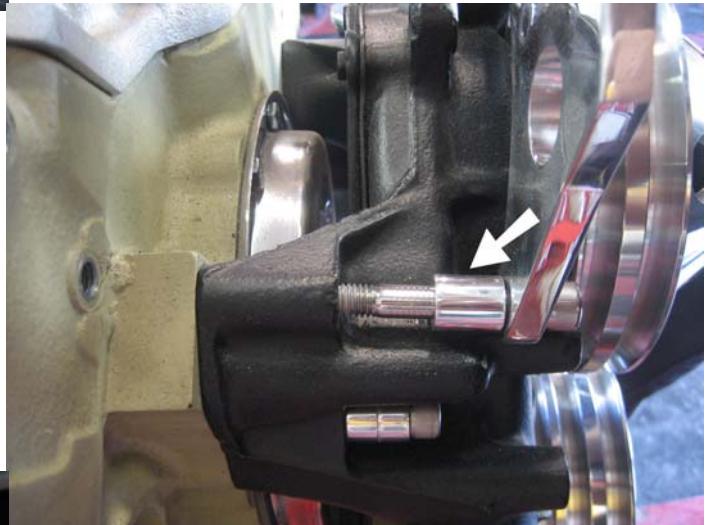

Install AC bracket piece using 3/8 16x 1 3/4 bolts in the manifold. And two 1/4 20 x 1 3/4 button heads (with 3/4 o.d. washers) through the "bridge) into the AC bracket
Note: This is on the passwnger side of the motor

